

# Pierson PRS Installation Instructions


**Step 1: Connect the “T” and Elbow fittings using a 7/16” box wrench.**




**Step 2: Roughly align and lightly bolt the Base unit to the machine table.**



**Step 3: Indicate the Base square to the table and firmly bolt down the base.**

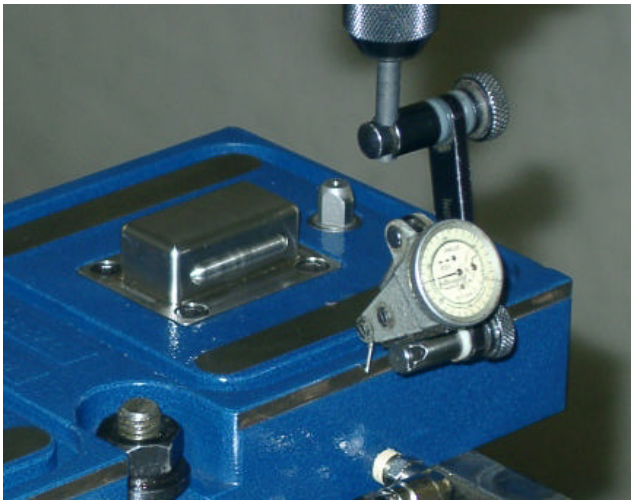

**Step 4: Assemble valve and bracket and bolt the assembly to the table.**

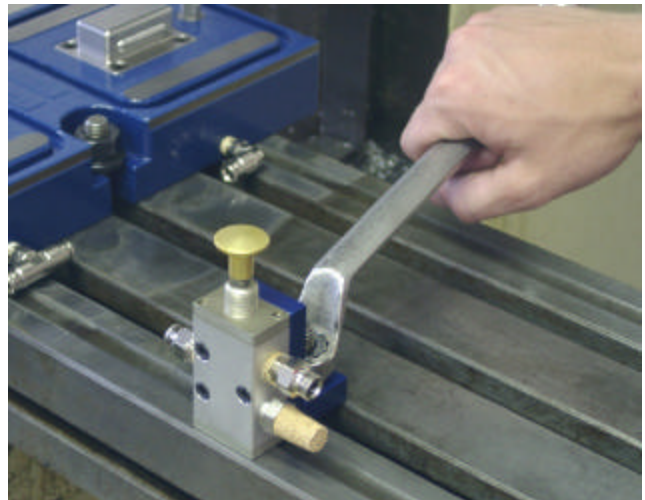

**Step 5: Connect short line between the base fittings.**



**Step 6: Route remaining lines from Base to hand valve to air source.**

